

5G Timer Replacement

1. Use small screw driver to remove cap on timer by inserting it between cap and black knob and twist or pull up to remove cap
2. Hold timer knob with fingers and loosen center screw under the cap, do not remove screw completely, just loosen it.
3. Once loose, pull black timer knob off.
4. Open Front panel on machine
5. There are two (2) screws holding front panel to machine.
6. Remove both screws and the front panel will open down.
7. You will see a silver clip holding the timer assembly in place, using a small screw driver, put screw driver between timer housing and clip and twist screw driver or you can also lift the clip to release it,
8. While clip is being held in the up position pull the timer out.
9. Cut and strip timer wires.
10. Push new timer into housing, it will clip in with a light push.
11. Connect wires.
12. Close front panel and secure with screws
13. Put black knob back on timer
14. While holding knob with fingers, tighten center screw on timer until tight
15. Attach top cap.