

Not all TLE's are setup in same way. Lifts may vary in designs and position of Controllers, Air Stations and Evacs.

Most Controllers will be positioned at rear left side. (From Drivers position.)


Safety Air ONLY should be ran to Evac's, to prevent over-filling waste oil tanks.

Shop Air Only should be ran to Lifts and Air Stations, to prevent Vehicles from being stuck on lifts.

Only Minimal amounts of plastic and/or rubber air line should be used, to make connections to stations.

All Pipes must be properly secured and as Vertically straight as possible when dropped from ceiling.

**TAKE PRIDE IN YOUR WORK**

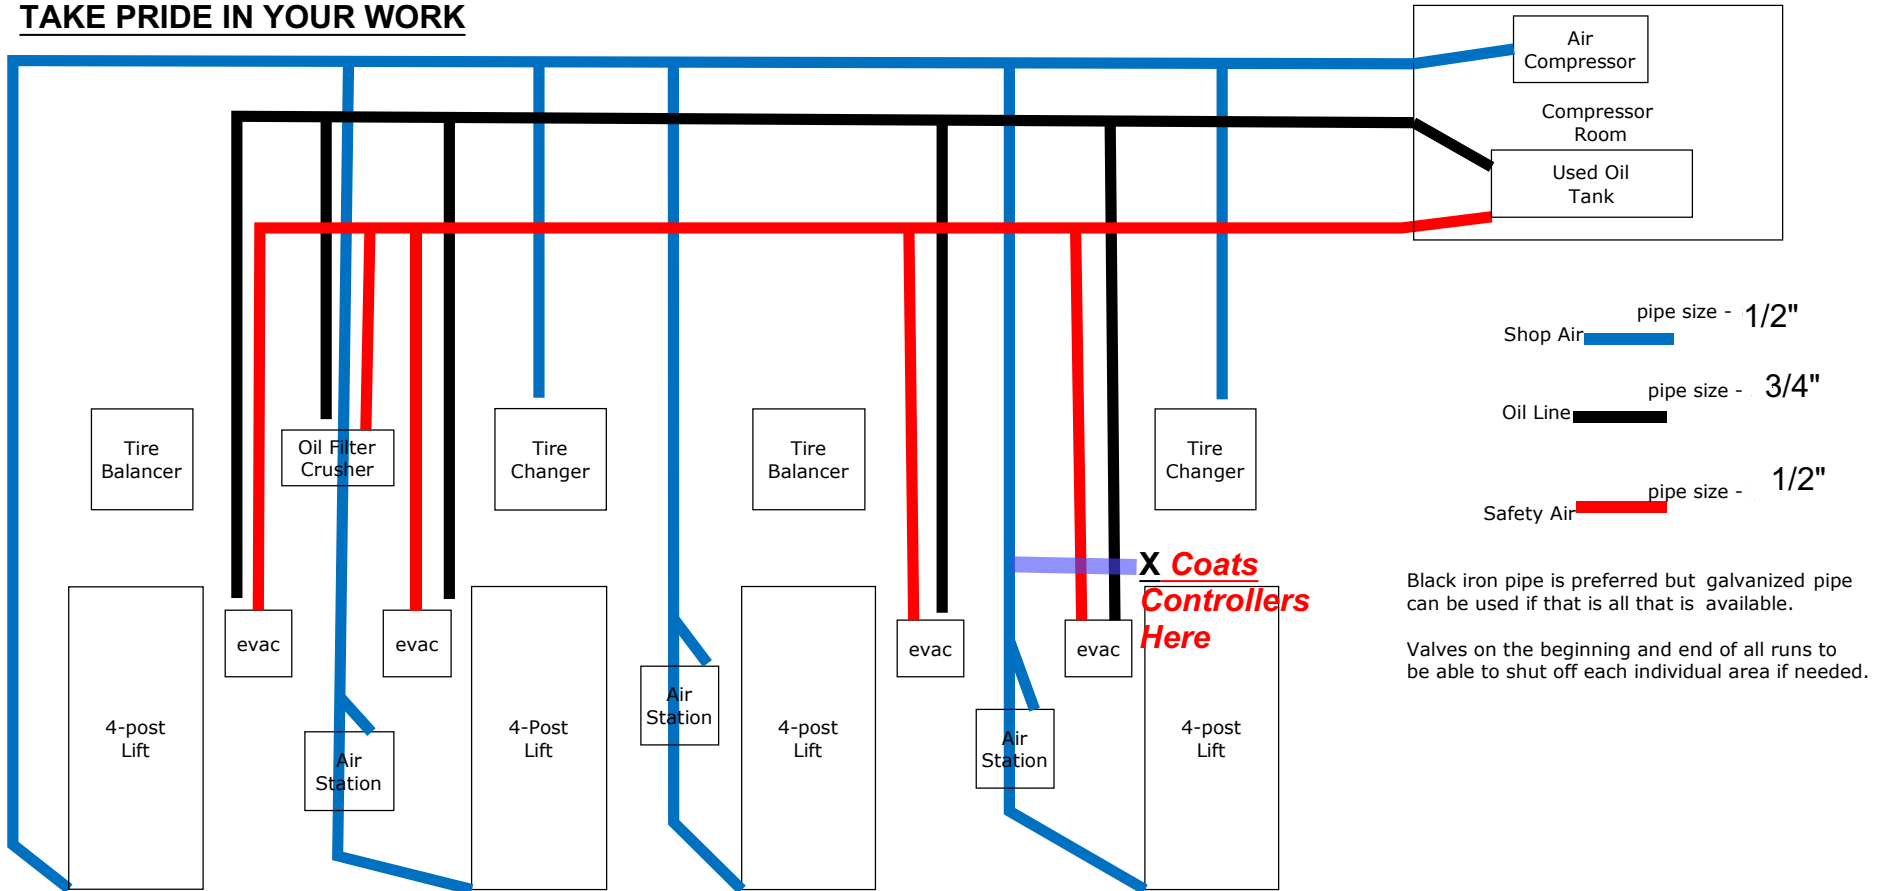

**New Coats 4 post lifts Air Stations and Controllers are Mounted to Front Left(Drivers Side)Post.  
All Air, Oil and Electrical Lines will be dropped accordingly.**